

LISTE DES CODES DE LA TÉLÉCOMMANDE

Codes pour télé

3M - 10737, 11616, 11655	Brockwood - 10019	Durabrand - 10463, 10180,	Goodmans - 10360
A-Mark - 10003	Broksonic - 10236, 10463,	10178, 10171 11034,	GPX - 10360
Abex - 10032	10003, 10426 11905,	10003, 11665	Gradiente - 10392
Accurian - 11803	11911, 11929, 11935	Dwin - 10747	Grunpy - 10180, 10179
Action - 10873	Byd:sign - 11309	Dynex - 12049, 11463	H & B - 11366
Admiral - 10093, 10463,	C&M - 10700	Eiki - 10735	Haier - 11034, 10768,
10179	Cadia - 11283	Electroband - 10000, 10185	11009, 11570, 11748
Advent - 10761, 10783,	Candle - 10030, 10046,	Electrograph - 11755,	Hallmark - 10178
10815, 10817 10842,	10056, 10186	11623	Hanns.G - 11783
11933	Carnivale - 10030	Electrohome - 10463,	Hannspree - 11348, 11745,
Adventura - 10046	Carver - 10054, 10170	10381, 10409, 11570	11783
Afftron - 10891	Casio - 10611, 11205	11670, 11672	Harley Davidson - 10043,
Aiko - 10092	CCE - 10217, 10329	Element - 11687, 12183	10179, 11904
Aiwa - 10032, 10701,	Celebrity - 10000	Emerson - 11864, 11394,	Harman/Kardon - 10054
11362, 11955	Changhong - 10765	10154, 10451, 10236,	Harvard - 10180, 10068
Akai - 10812, 11675, 10702,	Cinego - 11986	10462, 10180, 10178,	Hewlett Packard - 11494,
10030, 10098, 10672,	Citizen - 10060, 10030,	10171, 11661, 11905,	11088, 11089, 11101
11207, 11385, 11676,	10092, 10046 10056,	11909, 11911, 11913,	Hisense - 10748, 11314,
11686, 11688, 11689,	10186, 10280, 10561	11929, 11944, 11963,	11660, 12089
11690, 11692, 11935,	11669, 11671, 11672,	12167, 10282, 10280,	Hitachi - 10279, 10227,
12232	11935	10183, 10182, 10181,	10217, 10173, 10151,
Alaron - 10179, 10183,	Claritone - 10185	10179, 10177, 10158,	10097, 10096, 10095,
10216	Clarion - 10180	10039, 10038, 10019,	10056, 10043, 10038,
Albatron - 10700, 10843	Classic - 11984	10002	10036, 10032, 10016
Ambassador - 10177	Coby - 11538, 12017,	Emprex - 11422, 11765	HP - 11494, 11088, 11089,
America Action - 10180	12306, 12314 12315,	Encross - 10876, 11474	11101
Anam - 10180, 10004,	12326, 12338, 12340,	Envision - 10030, 10813,	Hyundai - 10849, 11219,
10009, 10008	12344, 12345, 12347,	11365, 12014, 12087	11294
Anam National - 10161	12348 12351, 12560	Epson - 11122, 11290	I-Inc - 11746
AOC - 10030, 10003, 10019,	Commercial Solut. - 10047	Erae - 11222	iLo - 11394, 11286, 11603,
10052, 10185, 11089,	Compaq - 10749	ESA - 10171, 11944, 11963	11665, 11684, 11990
11365, 11589, 11590,	Concerto - 10056	Fisher - 10154, 10159	Infinity - 10054
12014, 12087, 12402,	Contec - 10180	Fujitsu - 10179, 10186,	Initial - 11603, 11990
12479	Craig - 10180	12008	Insignia - 12049, 11423,
Aomni - 11623	Crosley - 10000, 10054	Funai - 10000, 10180,	10463, 10171, 11204,
Apex Digital - 10748, 10879,	Crown - 10180, 10039	10171, 10179, 11904,	11326, 11385, 11517,
10765, 10890 11217,	CTX - 10700	11963	11660, 11892, 11963,
11991, 12397	Curtis - 11200, 11326,	Futuretech - 10180	12002, 12417
Archer - 10003	12352, 12466	Gateway - 11755, 11001,	Inteq - 10017
Astar - 11531, 11738	CXC - 10180	11756	iRIS - 12189
Audiovox - 10451, 10180,	Cyberhome - 10794	GE - 10047, 10051,	IX - 10877
10092, 12513, 11952,	Cytron - 11326	10451, 10178, 10021,	Janeil - 10046
11951, 11937, 11868,	Daewoo - 10145, 10451,	10027, 10029, 10055,	JBL - 10054
11803, 11769, 11766,	10092, 11661 10019,	10135, 10279,	JCB - 10000
11284, 10875, 10846,	10066, 10067, 10091	10282, 10747, 11907,	JCM - 12189, 12256
10802, 10713, 10623,	10672, 11909	11919, 11922, 12359	Jensen - 10761, 10050,
10003, 12413	Daytron - 10019	GFM - 10171, 11665, 11963,	10817, 11299, 11326,
Aurora Systems - 10801	Dell - 11264, 11080, 11178	12167	11933
Aventura - 10171	Delta - 11369	Gibraltar - 10017, 10030,	JVC - 10463, 10053, 10036,
Axion - 10171	Denon - 10145, 10511	10019	10069, 10160, 10169,
Belcor - 10019	Diamond Vision - 11996	Go Video - 10886, 11823,	10182, 10731
Bell & Howell - 10154,	Digistar - 11565	11831	Kamp - 10216
10016	Digital Lifestyles - 11765,	GoldStar - 10178, 10030,	Kawasho - 10158, 10216,
BenQ - 11032, 11315	11822	10002, 10019, 11032,	10308
Bradford - 10180	Disney - 11665, 12152	10039, 10056, 10409,	Kaypani - 10052
Brilliant - 11007	Dumont - 10017, 10019	11926	KDS - 11687

KEC - 10180
 Kenwood - 10030, 10019
 KLH - 10765, 10767
 Kloss - 10024, 10046
 Knoll Systems - 10781
 KMDS - 12278
 Konka - 10632, 10638,
 10707, 11385, 11831,
 11939
 Kost - 11262, 11483
 Kreisen - 10876, 11474
 KTV - 10180, 10030, 10039,
 10183, 10185, 10217,
 10280
 LG - 11423, 10017, 11265,
 10178, 10442, 10700,
 10856, 11178, 11530,
 11637, 11934
 LiteOn - 10088
 Lloyd's - 11904
 Loewe - 10136
 Logik - 10016
 Luce - 10837, 11031
 Luxman - 10056
 LXI - 10047, 10054, 10154,
 10156, 10178, 10148,
 10747
 MAG - 11678
 Magnasonic - 11713, 11913
 Magnavox - 11454, 11866,
 11755, 10054, 10051,
 10030, 10171, 10706,
 11944, 11963, 11931,
 11913, 11904, 11990,
 12372, 11525, 12597,
 11365, 11198, 10802,
 10386, 10230, 10187,
 10186, 10179, 10096,
 10036, 10028, 10024,
 10020
 Magnin - 11907
 Majestic - 10016
 Marantz - 11454, 10054,
 10030, 10704, 11714,
 12447
 Matsushita - 10250
 Maxent - 11755, 11597,
 11714, 11757
 MB Quart - 11868
 Megatron - 10178, 10145,
 10003
 Memorex - 10154, 10463,
 10150, 10178, 10016,
 10179, 10877, 11570,
 11665, 11670, 11892,
 11911, 11920, 11924,
 11926
 MGA - 10150, 10178,
 10030, 10019, 10155,
 11907
 Micro - 11436
 Midland - 10047, 10017,
 10051, 10032, 10039,
 10135, 10747
 Mintek - 11603, 11990
 Minutz - 10021
 Mitsubish - 11250, 10093,
 10150, 10178, 10014,
 10019, 10036, 10098,
 10155, 10331, 10592,
 11797
 Monivision - 10700, 10843
 Motorola - 10093
 MTC - 10060, 10030,
 10019, 10056, 10091,
 10185, 10216
 Multitech - 10180, 10217
 NAD - 10156, 10178, 10056
 Nakamichi - 11493
 Naxa - 11998
 NEC - 10030, 10019, 10036,
 10056, 10170, 10704,
 11797, 12026
 NetTV - 11755
 Nexus Electronics - 12183
 Nikko - 10178, 10030,
 10092
 Niko - 11581
 Noblex - 10430
 Norcent - 10748, 10824,
 11089, 11365, 11590,
 11591
 Norwood Micro - 11286,
 11296
 Noshi - 10018
 NTC - 10092
 NuVision - 11657
 Olevia - 11610, 11144,
 11240
 Onwa - 10180
 Optimus - 10250, 10154,
 10166, 11913, 11924
 Optoma - 10887, 11348
 Optonica - 10093, 10165
 Orion - 10236, 10463,
 11463, 10179, 11905,
 11911, 11929
 Panasonic - 11480, 10250,
 11457, 10051, 10161,
 10162, 10226, 11291,
 11919, 11924, 11947,
 11969
 Park - 12104
 PDI - 11474
 Petters - 11523
 Philco - 11394, 10054,
 10030, 10171, 10019,
 10020, 10024, 10028,
 10096, 10179, 10187,
 10381, 11665, 11963
 Philips - 11454, 11394,
 11866, 10054, 10690,
 11483, 11744, 12372,
 12597
 Pilot - 10030, 10019, 10039
 Pioneer - 11457, 10166,
 10038, 10172
 Planar - 11496
 Polaroid - 11523, 10765,
 12120, 12117, 12063,
 12002, 11991, 11962,
 11769, 11767, 11766,
 11762, 11687, 11565,
 11538, 11385, 11341,
 11328, 11327, 11326,
 11316, 11314, 11286,
 11276, 11262, 10865,
 11314, 11286, 11276,
 11262, 10865, 11385
 Portland - 10451, 10092,
 11661, 10019, 10039
 Prism - 10051
 Proscan - 10047, 10030,
 10466, 10747, 11922,
 12147, 12183, 12256
 Proton - 10178, 10003,
 10031, 10052, 10466
 Prottron - 11320, 11323
 Provion - 11687
 Pulsar - 10017, 10019
 Pvision - 11222
 Pyle - 11200
 Quasar - 10250, 10051,
 10165, 10219, 11291,
 11919, 11924, 11969
 RCA - 12434, 10047, 10051,
 10093, 11661, 12932,
 12746, 12002, 11958,
 11953, 11922, 11919,
 11907, 10747, 10278,
 10254, 10135, 10090,
 10038, 10029, 10019,
 10018
 Realistic - 10154, 10180,
 10178, 10030, 10019,
 10032, 10039, 10056,
 10165
 RevolutionHD - 11623
 Rhapsody - 10183, 10185,
 10216
 Runco - 10017, 10030,
 10612
 Sampo - 11755, 10030,
 10032, 10039, 10052,
 10100, 10110, 11597
 Samsung - 12051, 10060,
 10702, 10178, 10030,
 11959, 11060, 10814,
 10766, 10587, 10482,
 10427, 10329, 10217,
 10056, 10039, 10032,
 10019
 Samsux - 10039
 Sansui - 10463, 10171,
 10165, 10173, 11670,
 11892, 11904, 11911,
 11929, 11935
 Sanyo - 10054, 10154,
 10036, 10088, 10107,
 10146, 10159, 10232,
 10484, 10798, 11907
 Sceptre - 10878, 11217,
 11360, 11599, 12337
 Scimitsu - 10019
 Scotch - 10178
 Scott - 10236, 10180,
 10178, 10019, 10179,
 10309, 11711
 Sharp - 10093, 10039,
 10153, 10157, 10165,
 10281, 10386, 10491
 Sharper Image - 11950
 Sheng Chia - 10093
 Shogun - 10019
 Signature - 10054, 10016
 Signet - 10800, 10844,
 11262
 Simpson - 10186, 10187
 Skyworth - 11799
 Solarism - 11220
 Sole - 11031, 11366, 11377,
 11483, 11530, 11623,
 12076
 Sony - 10810, 10000,
 10011, 10080, 11400,
 11685, 11904, 11925
 Soundesign - 10180, 10178,
 10179, 10186
 Sova - 11320, 11952
 Soyo - 11746, 11826,
 11828, 11830, 11831
 Spectricon - 10003, 10137
 Spectroniq - 11687
 Squareview - 10171
 SSS - 10180, 10019
 Starlite - 10180
 Studio Experience - 10843
 SunBrite - 11420, 11435,
 12337
 Superscan - 10093, 10864,
 01944
 Supre-Macy - 10046
 Supreme - 10000
 SVA - 10748, 10587, 10768,
 10865, 10871, 10872,
 11963
 Sylvania - 11864, 11394,
 10054, 10030, 10171,
 11963, 11944, 11931,
 11913, 11665, 11314,
 10587, 10381, 10187,
 10096, 10065, 10028,
 10024, 10020
 Symphonic - 10180, 10171,
 11904, 11913
 Syntax - 11610, 11144,
 11240
 Tandy - 10093, 10218
 Tatung - 10003, 11101,
 11286, 11287, 11288,
 11361, 11503, 11756
 Technics - 10250, 10051
 Technol Ace - 10179
 Techview - 10847, 12004
 Techwood - 10051, 10003,
 10056
 Teknika - 10054, 10180,
 10150, 10060, 10092,
 10016, 10019, 10039,
 10056, 10179, 10186,
 10312
 Telefunken - 10702, 10056
 Tera - 10031
 Thomas - 11904
 Thomson - 10209, 10625
 TMK - 10178, 10056, 10177
 TNCi - 10017
 Toshiba - 10156, 10154,
 11265, 10060, 10003,
 10036, 10149, 11343,
 11369, 11935, 11945,
 11959, 12006
 Toseonic - 10185
 Totevision - 10039
 Trical - 10157
 TruTech - 11665, 11723,

12066
TVS - 10463
Ultra - 10391, 11323
Universal - 10027
US Logic - 11286
Vector Research - 10030
Venturer - 11865
VEOS - 11007
Victor - 10053
Video Concepts - 10098
Vidikron - 10054
Vidtech - 10178, 10019,
10036
Viewsonic - 11755, 10797,

10857, 10864, 10885,
11330, 11365, 11578,
11627, 11742, 12014,
12087
Viking - 10046, 10312
Viore - 11207, 11684,
11811, 12104, 12087
Visart - 11336
Vizio - 11758, 10864,
10885, 11756
Waycon - 10156
Westinghouse - 10451,
10885, 10889, 10890,
11217, 11282, 11577,

12293
White Westinghouse -
10463, 11661, 11909
WinBook - 11381, 11503
Wyse - 11365
Yamaha - 10030, 10019,
10797
Zenith - 11423, 10000,
10047, 10017, 10463,
11265, 10178, 10030,
10145, 10092, 11661,
10160, 11365, 10016,
11904, 11909, 11911,
11929

Zonda - 10003

Codes pour amplificateurs audio

Accuphase - 30382
Acurus - 30765
Adcom - 31100
Aiwa - 30406
Altec Lansing - 31742
Anthem - 32220
Aragon - 39765
Arcam - 31881
Bladelius - 31994
Bose - 30674
Breath - Audio 31963
Bryston - 32359
Cal. Audio Labs - 31098
Cambridge Audio - 31982
Carver - 30269
Cinema Sound - 30160
Classe - 31461, 31462,
31915, 32854
Curtis Mathes - 30300
Denon - 30160, 32134,

32706
Elan - 30647
Emotiva - 31908
Forte - 30606
Gateway - 31621
GE - 30078
Goldstar - 30031
Halcro - 31934, 32198
Harman/Kardon - 30892,
30106
JVC - 30331
Kenwood - 30356
Krell - 31837, 31926, 32463
Left Coast - 31592
Lennox - 31561
Lexicon - 31145, 31802
Linn - 30269
Logitech - 31408
Luxman - 30165
Magnavox - 30269

Marantz - 30892, 30321,
30269, 31892, 32138
Mark Levinson - 31438,
32405
Macintosh - 30251
Mondial - 30765
NAD - 31767, 31995, 32879
Naim - 30552
Nakamichi - 30321
NAT - 32562
NEC - 30264
Nuvo - 31963
Optimus - 30395, 30300
Panasonic - 30308, 30521
Parasound - 30246, 31934,
32245
Pass Labs - 30269
Philips - 30892, 30269
Pioneer - 30013, 30300,
31932

Polk Audio - 30892, 30269,
32242, 32243
Primare - 31851, 31853,
32008
RCA - 30300
Regent - 31568
Russound - 31873
Sansui - 30321
Sonance - 32433
Sony - 30689, 30220,
30815, 31769
Soundesign - 30078, 30211
Technics - 30308, 30521
Thule Audio - 31851, 32169
Velodyne - 31941
Victor - 30331
Yamaha - 30354, 30133,
30143, 30504, 32592
ZVOX - 32333

Codes pour amplificateurs audio/vidéo

ADA - 31946	GE - 31379	32309	31409, 31411, 31416,
ADC - 30531	Go Video - 31532	Nakamichi - 31313, 30097,	31545, 31546, 31549,
Adcom - 30616, 32294	GPX - 32604	31555, 31642	31723
Aiwa - 31405, 31388, 31641	Harman/Kardon - 30110,	NexxTech - 31751	Sherwood - 30062, 30491,
Akai - 30224, 31512	30189, 31306, 32443	Niro - 31634	30502, 31077, 31423,
Alco - 31390	Hitachi - 31801	Norcent - 31389, 31751	31517, 31567, 31653,
Altec Lansing - 32597	Initial - 31426	Nova - 31389	31905, 31913, 31953,
AMC - 31077	Insignia - 31030, 31077,	Nuvo - 32509	31966, 31971, 32169,
Amphion Media - 31563,	31652, 31751, 31893,	Onkyo - 31805, 30135,	32264
31615	32126, 32169, 32175,	31298, 31531, 32451	Sherwood Newcastle -
AMW - 31563, 31615	32472, 32929, 32966	Optimus - 31023, 30042,	31567, 31913, 32169
Anam - 31609, 31074	Integra - 31805, 30135,	30186, 30531, 30670,	Sonic Blue - 31383, 31532,
Anthem - 31231	31298	30797, 31074	31869
Apex Digital - 31257, 31430,	iSymphony - 32018, 32258,	Oritron - 31497	Sonic Frontiers - 31231
31774	32442	Panasonic - 32967, 31308,	Sony - 31759, 31622,
Arcam - 31189, 31984,	Jamo - 31564	31518, 30039, 30367,	30158, 31131, 31382,
32002, 32256	JBL - 30110, 31306	31316, 31509, 31548,	31503, 31558, 31658,
Audiologic - 31646	Jensen - 30797	31633, 31676	31722, 31758, 32216,
Audiotronic - 31189	JVC - 30074, 30531, 31374,	Parasound - 31839, 31907,	32475
Audiovox - 31390	31495, 31676	32246	Soundesign - 30670
B & K - 30701, 30820,	KEF - 31718	Philips - 31189, 31269,	Spherex - 31927
30840, 31992	Kenwood - 31313, 30042,	32311, 30189, 30391,	Stereophonics - 31023
Bose - 31229, 30639,	30077, 30186	30891, 31089, 31266	Sunfire - 31313, 31931,
31253, 31841, 31933	KLH - 31390, 31412, 31428	Pioneer - 31023, 30176,	32668
Cambridge Sound - 31370,	Klipsch - 31443	30531, 30630, 31384,	Teac - 30163, 30463,
31477, 31624, 32297	Koss - 31497	31459, 31831, 31935	31074, 31226, 31390,
Capetronic - 30531	Lasonic - 31798	Polaroid - 31508, 32150	31528, 32261, 32363
Carver - 31189, 30008,	Lenox - 31437	Polk Audio - 31289, 32270	Technics - 31308, 31518,
30042, 30360	Lexicon - 31076	Proscan - 31254	30039, 30208, 30309,
Casio - 30195	LG - 31293, 31524, 32197,	Quasar - 30039	31633
Clarinette - 30195	32676	RCA - 31023, 31609, 31254,	Thomson - 31910
Classic - 31352	Liquid Video - 31497	30346, 30531, 31074,	Thorens - 31189
Coby - 31389, 31513, 32127	Lloyd's - 30195	31390, 31459, 31511,	Venturer - 31390
Criterion - 31420	Magnavox - 31189, 31269,	32041, 32611	Victor - 30074
Curtis - 31389, 31596	30189, 30195, 30391,	Realistic - 30195	Vivid - 31635
Daewoo - 31250	30531, 31089, 31514	Regent - 31437	Vizio - 31517
Denon - 32857, 31360,	Marantz - 31189, 31269,	Rio - 31869	Yamaha - 32061, 30176,
30176, 30273, 30771,	30039, 30189, 31289	Saba - 31519	30186, 30376, 31176,
32230, 32247, 32255,	McIntosh - 31289	Samsung - 31295, 31868	31276, 31331, 31375,
32279, 32414	MCS - 30039, 30346	Sansui - 30346	31476, 32455, 32467,
Emerson - 32026	Micromega - 31189	Sanyo - 30219, 30360,	2471
Fisher - 30042, 31409,	Mitsubishi - 31393, 31957	30801, 31251, 31469,	Yorx - 30195
31801	Modulaire - 30195	31801	Zenith - 30857, 31293,
Garrard - 30424, 30463	Myryad - 31189, 31901	Sharp - 30186, 31952	31524, 31652
Gateway - 31517, 31567	NAD - 30320, 31889, 31989,	Sharper Image - 31385,	